


# DuraSlat

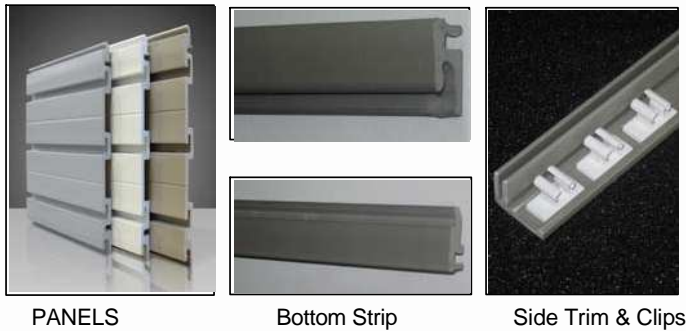

1. Mark the desired height of the *DuraSlat* Mounting track.
2. Draw a level line for the bottom of the Mounting track.
3. Install the *DuraSlat* Mounting track at the desired height and position. Make sure the track is level.  
(Can be installed over wood studs, drywall, concrete block or cement).
4. Attach screws every 16" along the bottom of the track into studs or other building material.
  - a. Align additional Mounting tracks as needed.
  - b. **TIP:** Cut Mounting TRACK (as needed) to end over a stud.
5. Insert *DuraSlat* Panels, using **Tilt-n-Lock** connection, into bottom slot of the Mounting track. Apply upward pressure to be certain of a tight fit. Screws will be hidden.
6. Hinge *DuraSlat* Panel(s) against wall and attach screws every 16" along bottom of Panel(s) to secure in place.
  - a. **TIP:** Cut *DuraSlat* Panel(s) (as needed) to end over a stud.
7. Continue to add additional *DuraSlat* Panels, from the top down, into the bottom slot of the Panel above, as the job requires.
  - a. Apply upward pressure to be certain of a tight fit. Screws will be hidden.
8. Attach **Bottom Finishing Strip** into the bottom slot of the last panel for a finished look and complete **Hidden-Screw** installation.
  - a. **TIP:** Back-off screws 1/2 turn, or as needed, for a snug fit.
9. Insert **Trim Clips** into slots of *DuraSlat* - Top, Middle and Bottom. Extra Trim Clips are available depending on the installation.
10. Measure height of *DuraSlat* installation and cut **Side Trim** to length. Push **Side Trim** onto **Trim Clips**. Use pressure as needed.

Patent Pending #7256.P0001US

